

PCS100 Programming Guide

MG / SP / E Series

Compatibility

Magellan MG5000 / MG5050	Control Panel	V3.0 and higher
	Keypad (K32LCD)	V1.1 and higher
Spectra SP SP5500 / SP6000 / SP7000	Control Panel	V3.0 and higher
	Keypad (K32LCD)	V1.1 and higher
E55	Control Panel	V2.0 and higher

Note: It is possible to program the PCS100 with any compatible keypad. However, to enter text without a K32LCD, use WinLoad.

MG / SP / E55 Specific Sections

Features	MG / SP / E55 Sections	Digiplex EVO Sections	PCS100 Instructions
GSM Reporting			
Reporting Method Selection	[805]	[2950]	Page 10
WinLoad Access Via GPRS			
Access Point Name Part 1	[921]	[2960]	Page 11
Access Point Name Part 2	[922]	[2961]	Page 11
User Name Part 1	[923]	[2962]	Page 11
User Name Part 2	[924]	[2963]	Page 12
GPRS Password Part 1	[925]	[2964]	Page 12
GPRS Password Part 2	[926]	[2965]	Page 12
Software Port	[920]	[2966]	Page 12
WinLoad TCP/IP/GPRS Password	[927]	[3013]	Page 12
Text Message (SMS) Notification			
SMS Language	[856]	[2953]	Page 14
SMS Site Name	[780]	[2954]	Page 14
Supervision Options			
GSM No Service Trouble Feedback	[805]	[2950]	Page 19
GSM No Service Timer	[855]	[2952]	Page 19
GSM RF Jamming Supervision	[805]	[2950]	Page 19
Control Panel Supervision	[884]	[2951]	Page 20

SMS Telephone Number Programming

SMS telephone numbers are set by the user through master programming. See page 13 of the PCS100 manual for more details.

1. Press the **[⏻]** key.
2. Enter **[MASTER CODE]**.
3. To enter SMS Setup, press **[ARM]**.
4. Using the **[▲]** and **[▼]*** keys or by entering [01] to [08], select one of the eight telephone numbers you wish to program and press **[ENTER]**.
*With K10LEDV/H or K636 keypads, use **[SLEEP]** for **[▲]** and **[STAY]** for **[▼]**.
5. Enter the telephone number and press **[ENTER]**.
6. Select the SMS Event Call Options you wish to apply to the telephone number:

Option	Events that send SMS
[1]	Any Alarm
[2]	Arming and Disarming
[3]	Any Trouble
[4]	Any Trouble Restore
[5] to [8]	Future Use

7. To save press **[ENTER]**.
8. Select which areas are assigned to this telephone number by pressing [1] or [2] or both.
9. To save press **[ENTER]**.

Viewing GSM IP Information on the keypad (MG/SP control panels with K32LCD only)

To view IP Address, IP Port, and Site Name settings:

1. Press the **[⏻]** key.
2. Enter **[MASTER CODE]**.
3. To enter SMS Setup, press **[ARM]**.
4. Using the **[▲]** key, scroll to view the desired information
[9] GSM IP Address
[10] GSM IP Port
[11] GSM PC Password (future use)
[12] Site Name
5. Press **[ENTER]** to return to the GSM menu or press **[CLEAR]** to exit.